


KPM FUEL SYSTEMS

2007-2009 Pontiac G8 Fuel Module Retrofit Kit

KPM FUEL SYSTEMS

**PONTIAC G8
2007-2009
RETROFIT KIT**

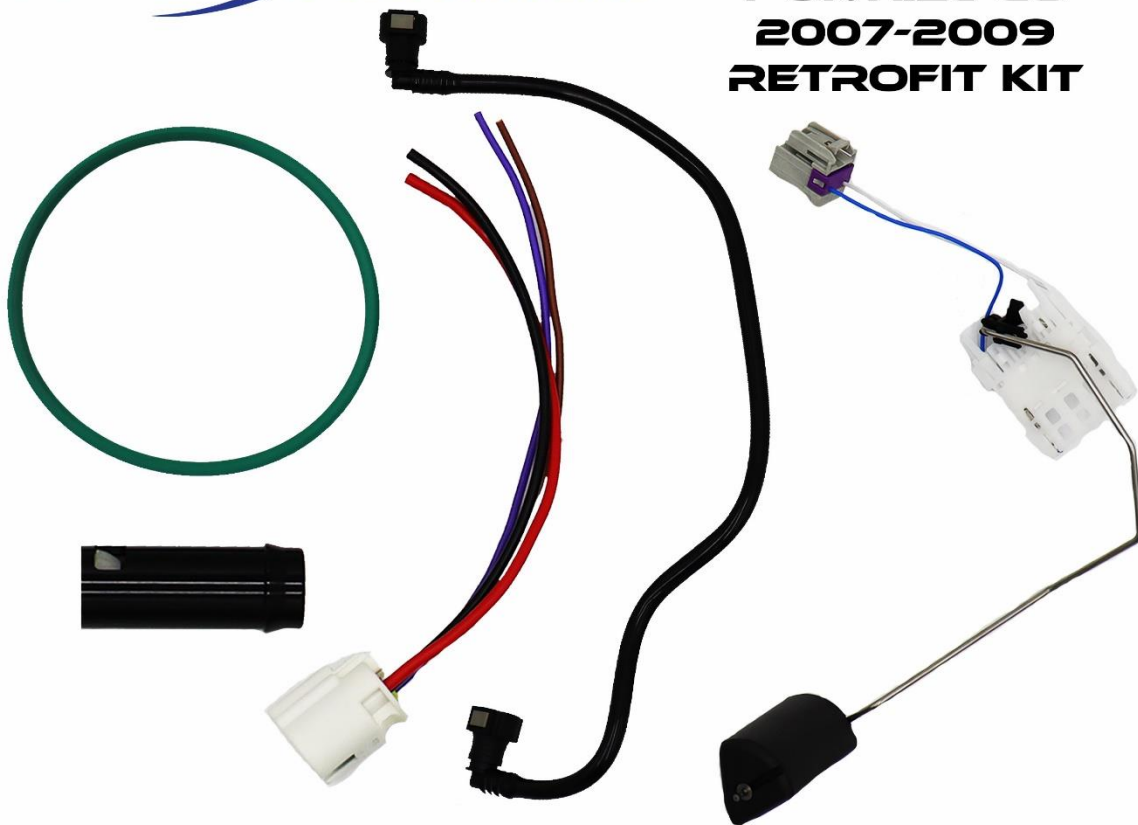



The 2007 -2009 Pontiac ran a different fuel module to the later 2013-2017 Chevrolet SS models.

KPM Fuel Systems supply a supplementary *Retrofit Kit* with all our KPM Fuel Modules to enable a straight-forward and easy fitment to the 2007- 2009 Pontiac G8.

This kit consists of:

- 1) 1x electrical connector and wires
- 2) 1x crossover pipe adaptor
- 3) 1x new supply line hose
- 4) 1x fuel sender assembly

Fuel Module Retrofit Kit Fitting Instructions


- 1) Unplug your standard wiring connector from your standard fuel module.
- 2) Cut the wiring connector off the standard loom, approx. 20mm down from the connector.
- 3) Noting the wiring diagram colours, solder the new electrical connector and wires in place of the old wiring and connector as per diagram.
- 4) Be sure to use suitable shrink tubing on each wire to prevent any shorting of wires.
- 5) Gently push on the cross over pipe adaptor to the outlet at the bottom of the KPM Fuel Module until it “clicks” on firmly.
- 6) Route the new supplied fuel line and fit it to the KPM Fuel Module until it “clicks” on firmly.
- 7) Position the fuel sender assembly down into the module as pictured. Allow it to slide down until it reaches the locating tabs. Gently push further and it will click into its final position.
- 8) Insert the sender assembly electrical connector to the main Fuel Module body.

Your Retrofit kit is now fitted. Please continue to follow the main instructions to continue with your KPM Fuel Module fitment.

KPM FUEL SYSTEMS

KPM FUEL SYSTEMS

PONTIAC G8
2007-2009
RETROFIT KIT

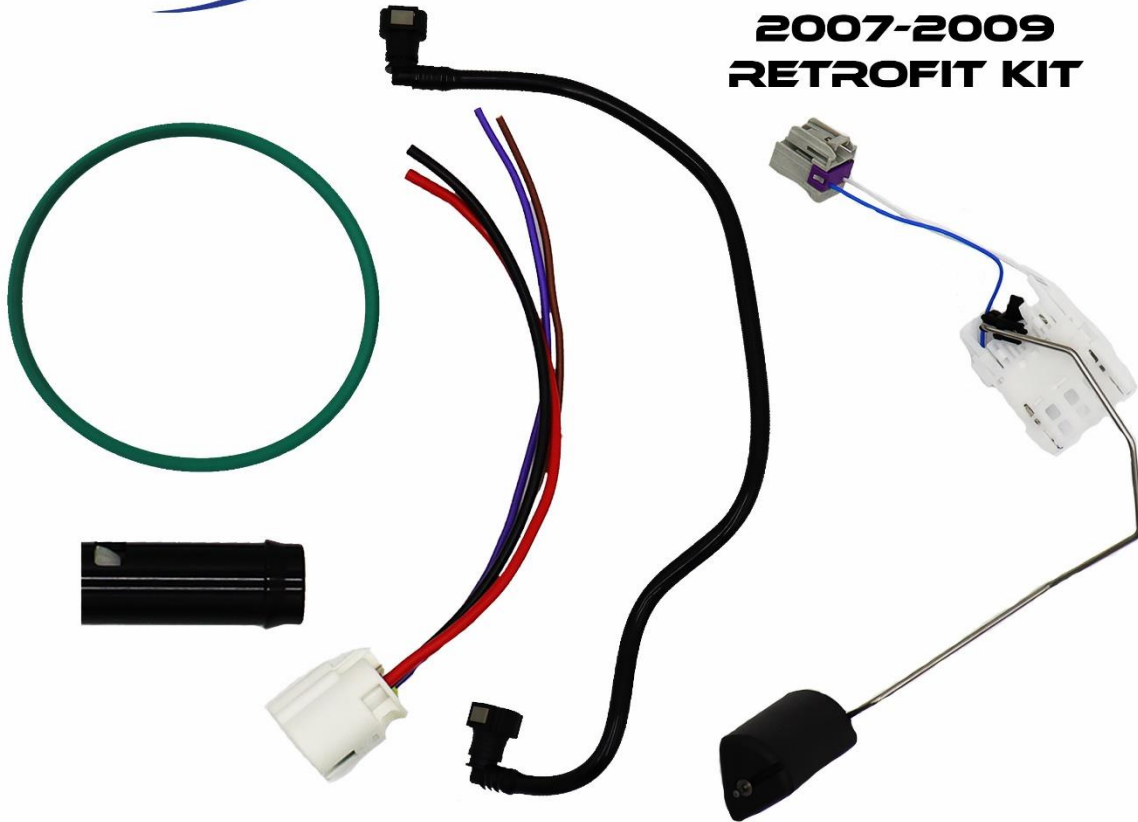

WIRING DIAGRAM

